

↑Large↑ 11³/₈" w Center Line



Extreme Weather Pet Door™ Cutting Template

Shoulder Height


Shoulder Height

NOTICE:

Cut out the correct size template. For the Large no cutting is required. If installing in a wall, reduce cut-out width by 1" for the Small and Medium. For the Large reduce cut-out width by 1" and cut-out height by 1".

↑Medium↑ 9³/₈" w Center Line

Tools Needed

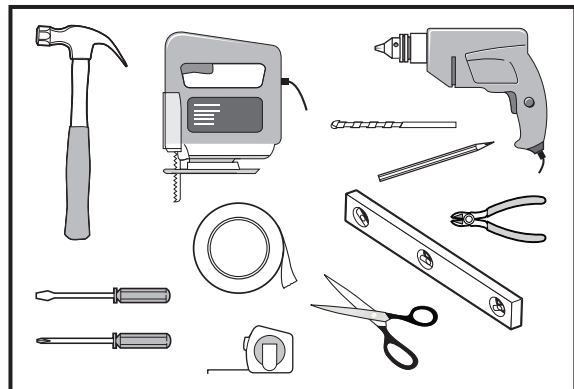

- Hammer
- Jigsaw
- Drill
- 1/2" Drill Bit
- Wire Cutters
- Slotted & Phillips Screwdrivers
- Tape Measure
- Tape
- Pencil
- Level
- Scissors
- Safety Equipment
- Optional**
- Duct Tape
- Caulk

Shoulder Height

Shoulder Height

↑Small↑ 6³/₈" w Center Line

Shoulder Height

Shoulder Height

NOTICE:

When applying cutting template there should be a minimum of 3" between the bottom and sides of the door and the outer edge of the template to maintain the structural integrity of the door.

↑Large↑ 19" H

↑Medium↑ 14" H

↑Small↑ 10¹/₈" H

↑Small↑ 10¹/₈" H

↑Medium↑ 14" H

↑Large↑ 19" H



Center Line